



## PRODUCT SHEET & SPECIFICATIONS

### n.FORM WALL MOUNTED STROBE

MODELS STROBE-WM-AMB / STROBE-WM-BL / STROBE-WM-RED / STROBE-WM-GR



### CURRENT RATINGS

Amber Lens Strobe Current Ratings					
Candela	15cd	30cd	60cd	75cd	110cd
UL Max <sup>1</sup>	47mA	64mA	113mA	145mA	178mA

Blue, Green and Red Lens Strobe Current Ratings					
Candela	15cd	30cd	60cd	75cd	110cd
UL Max <sup>1</sup>	105mA	130mA	203mA	243mA	310mA

Candela selection slider switch.  
Depress center and slide switch  
to desire brightness level.

Break off pin and insert into hole  
at the bottom of the selector to  
lock candela setting. Signal must  
be removed from bracket and pin  
pushed forward from backside out  
of hole to change candela.

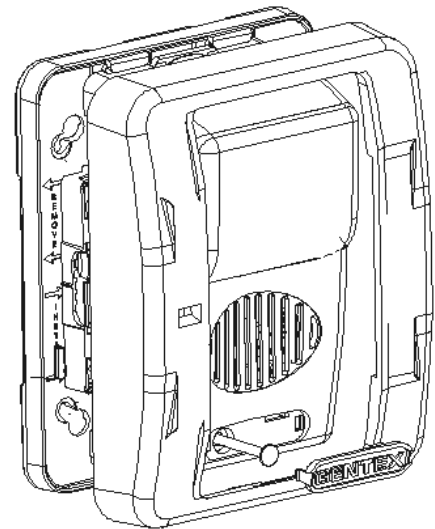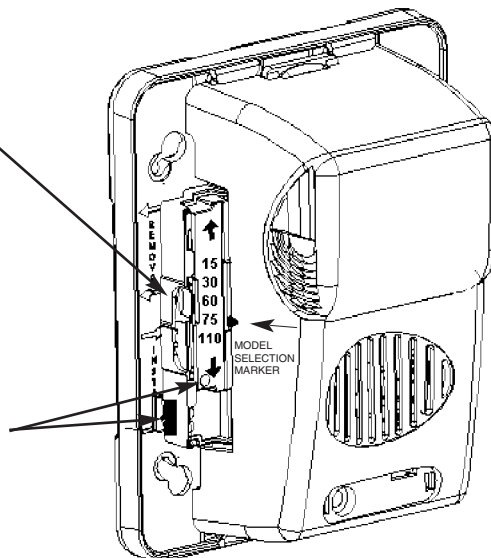

To remove bezel, grip both sides of bezel and pull in a  
downward and outward motion.